



INSTALLATION GUIDE




Karran USA
(866) 452-7726
info@karran.com




BASKET STRAINERS AND DISPOSAL FLANGES


BASKET STRAINERS

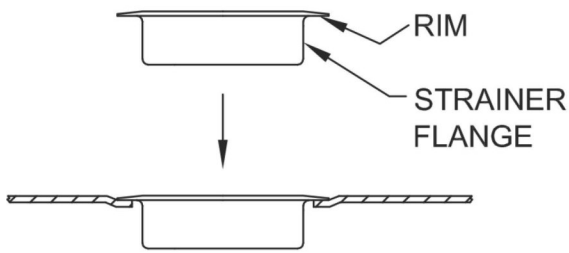


APPLY A NON-ACID SILICONE UNDER THE RIM OF THE STRAINER FLANGE AND PUSH DOWN INTO SINK.

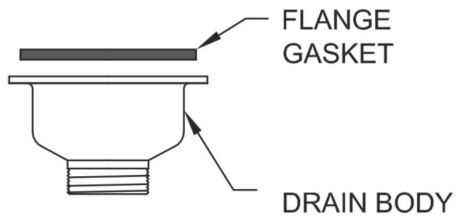

LUBRICATE FLANGE GASKET WITH WATER. PLACE INTO LIP OF DRAIN BODY AND POSITION DRAIN BODY ON BOTTOM OF SINK.

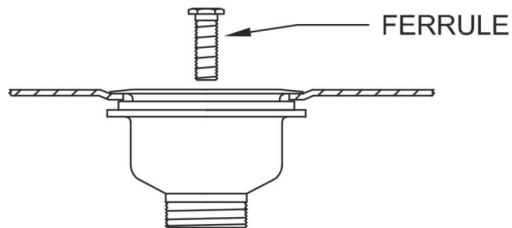


LINE UP RIBS IN DRAIN BODY AND STRAINER FLANGE THEN SCREW IN FERRULE. CAUTION: HAND TIGHTEN THEN 1/4 TURN WITH SCREWDRIVER. DO NOT OVER-TIGHTEN.

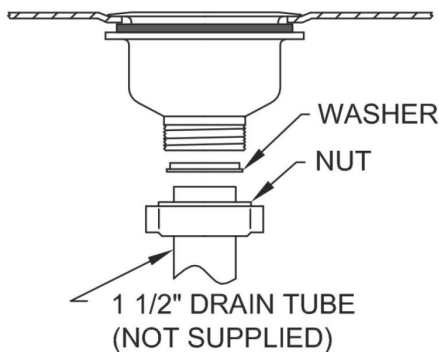


MAKE SURE WASHER IS IN POSITION, SLIDE NUT ON 1-1/2" DRAIN TUBE. PUSH TUBE INTO DRAIN BODY AND HAND TIGHTEN NUT. TEST FOR LEAKS.

DECORATIVE DISPOSAL FLANGES

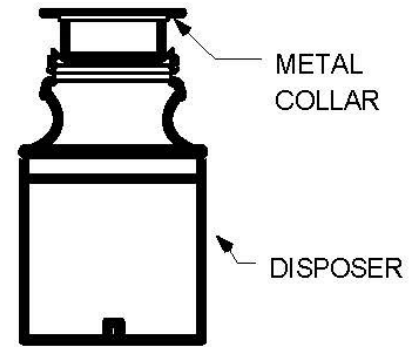


MAKE SURE THAT THE DISPOSER IS INSTALLED PROPERLY AND CLAMP IS SECURE.

CLEAN INSIDE OF METAL COLLAR.

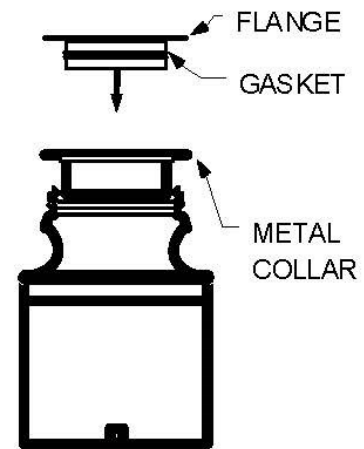

LUBRICATE FLANGE GASKET WITH WATER AND PUSH FLANGE SLOWLY INTO METAL COLLAR.

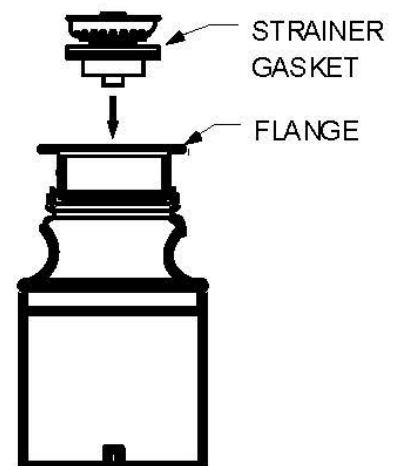

LUBRICATE GASKET ON STRAINER WITH WATER AND PUSH SLOWLY INTO THE FLANGE.

CARE AND MAINTENANCE: NEVER USE ANY ABRASIVE CLEANERS SUCH AS SOFT SCRUB OR COMET TO CLEAN. USE ONLY A SOFT CLOTH AND WIPE WITH WATER AND MILD SOAP.